

# Transtar Part # Numbering Guide

The Part Numbering Guide is a reference document that explains our part numbering system of using a variable prefix, base number and suffix that when broken down will tell you the application, type of part, and additional information such as type of material. Since the logic of this system is applied across the board, it is very easy to learn once you understand how it is set up.

The part number may start with **Prefix Letters** which refer to various part differences such as the level of the part's origin. A given hard part, for example, could have the prefix "D" for the Original Equipment part, an "A" if it is New Aftermarket, or "AR" for Remanufactured.

The **Base Number** is made up of two components. It starts with a 2- or 3- digit number that tells you the transmission application, "36" for an E4OD for example, followed by 3 digits that tell you the commodity of the part - "354", for example, tells you that the part is a 3-4 Accumulator O-Ring. For the complete list of transmission code numbers, please refer to the Transmission Codes Guide.

**Suffix Letters** refer to part differences such as the part's position in the transmission or its material composition. A pan gasket with an "F" suffix, for example, is made of Fiber, whereas one with a "W" suffix is Bonded.

## Transtar Part # Numbering Guide

|                                                       |                                                                    |
|-------------------------------------------------------|--------------------------------------------------------------------|
| 000-                                                  | -099                                                               |
| <b>Prefix Letter</b>                                  | <b>Suffix Letter</b>                                               |
| No Prefix = P & R Kits                                | No Suffix = Kits w/ Cork Pan Gaskets or Default Gasket*            |
| No Prefix = Kits w/ Ray/Borg/Dynax Frictions          | * Default Gasket = Late models that are originally equipped with   |
| No Prefix = Filters, Filter Kits w/ SPX               | w/ Fiber or Bonded Gaskets. These will have NO Suffix.             |
| No Prefix = Bushings Exc Teckpak                      | F = Kits & Filter Kits w/ Fiber Pan Gaskets (Exc Above)            |
| A = Kits w/ Value Brand Frictions                     | HD = Heavy Duty                                                    |
| A = Filters, Filter Kits (Exc OE, SPX, Filtertek)     | HP = High Performance                                              |
| A = OE Bands (Exc Borg Warner)                        | P = Kits w/ Molded Pistons                                         |
| B = Borg Warner Bands                                 | ** (No Suffix if Kit w/ Molded Pistons is the only option offered) |
| C = Core                                              | W = Kits & Filter Kits w/ Bonded Pan Gaskets (Exc Above)           |
| D = OE Kits, Filters, Filter Kits, & Bands            | X = Kits w/o Pan Gasket                                            |
| E = Filtertek Filters & Filter Kits                   |                                                                    |
| N = New Bands (Exc OE or BW)                          |                                                                    |
| R = Relined Bands                                     |                                                                    |
| S = Sonnax                                            |                                                                    |
| T = Teckpak Bushings                                  |                                                                    |
| <b>000 Paper &amp; Rubber Kit</b>                     | 050 Bushing, Forward Hub & Front Ring Gear                         |
| 001 Sub Kit                                           | 051 Bushing, Shell                                                 |
| 002 Paper & Rubber w/ Rings & Seals                   | 052 Bushing, Forward Sun Gear (Or Front)                           |
| 003 Overhaul Plus (Custom Kits)                       | 053 Bushing, Front Planet                                          |
| 004 Master w/ Frictions Less Steels                   | 054 Bushing, High Clutch Hub, Sun / Gear Reaction Shaft            |
| 005                                                   | 055 Bushing, Input Hub                                             |
| 006 Master w/ Frictions & Steels                      | 056 Bushing, Reverse Sun Gear (Rear)                               |
| 007 Super w/ Frictions Less Steels                    | 057                                                                |
| 008 Super w/ Frictions & Steels                       | 058 Bushing, Rear Planet                                           |
| 009                                                   | 059                                                                |
| <b>010 Filter, Main (Use M010 For Inline Filters)</b> | 060 Bushing, Rear Ring Gear Support                                |
| 011 Filter Kits, Main                                 | 061 Bushing, Rear Band Drum                                        |
| 012 Filter, Pump                                      | 062 Bushing, Output Shaft (Pilot), Or Counter Shaft                |
| 013 Filters, Spin On / Cooler Return                  | 063 Bushing, Differential Housing                                  |
| 014 Filter, Governor                                  | 064 Bushing, Case                                                  |
| 015 Filter, Valve Body                                | 065                                                                |
| 016 Filter, Solenoid                                  | 066 Bushing, Extension Housing                                     |
| 017 Filter, In Case                                   | 067                                                                |
| 018 Filter, Pressure Reg. & Shift Solenoid            | 068                                                                |
| 019 Filter, Grit Eater                                | 069 Bushing, Shift Lever                                           |
| <b>020 Band, Overdrive</b>                            | <b>070 Seal, Front Pump (Converter)</b>                            |
| 021                                                   | 071                                                                |
| 022 Band, Intermediate (Direct, High/ Reverse)        | 072 Seal, Manual Lever                                             |
| 023                                                   | 073 Seal, Throttle Lever                                           |
| 024 Band, Reverse                                     | 074 Seal, Extension Housing                                        |
| 025                                                   | 075 Seal, Pinion                                                   |
| 026 Band, Forward                                     | 076 Seal, Right Axle (Passenger Side)                              |
| 027                                                   | 077 Seal, Left Axle (Driver Side)                                  |
| 028                                                   | 078 Seal, Speed-O-Gear                                             |
| 029                                                   | 079 Seal, Accumulator Piston                                       |
| <b>030 Bushing Kit</b>                                | 080 Seal, Misc                                                     |
| 031 Bushing, Converter Hub                            | 081 Seal, Misc                                                     |
| 032 Bushing, Converter Reactor (Shaft)                | 082                                                                |
| 033                                                   | 083 Seal, Overdrive Drum To Shaft                                  |
| 034 Bushing, Pump Body                                | 084                                                                |
| 035 Bushing, Inner Pump Gear                          | 085                                                                |
| 036 Bushing, Stator (Front) (Or Front Cover)          | 086                                                                |
| 037 Bushing, Stator (Rear)                            | 087                                                                |
| 038 Bushing, Overdrive Drum                           | 088                                                                |
| 039 Bushing, Overdrive Hub                            | 089 Retainer, Front Seal                                           |
| 040 Bushing, Overdrive Sun Gear                       | 090 Retainer, Axle Seal                                            |
| 041 Bushing, Overdrive Shaft                          | 091                                                                |
| 042 Bushing, Overdrive Planet                         | 092                                                                |
| 043                                                   | 093                                                                |
| 044 Bushing, Center Support                           | 094                                                                |
| 045 Bushing, Sprocket Support                         | 095 Seal Pipe, (Front)                                             |
| 046 Bushing, Intermediate Drum (Direct, High/ Rev)    | 096 Seal Pipe, (Rear)                                              |
| 047 Bushing, Input Shaft (Main Shaft)                 | 097                                                                |
| 048 Bushing, Forward Drum                             | 098                                                                |
| 049 Bushing, Turbine Shaft                            | 099                                                                |

## Transtar Part # Numbering Guide

|                                                                      |                                                               |
|----------------------------------------------------------------------|---------------------------------------------------------------|
| 100-                                                                 | -199                                                          |
| <b>Prefix Letter</b>                                                 | <b>Suffix Letter</b>                                          |
| No Prefix = Borg Warner Frictions                                    | No Suffix = Metal Sealing Rings                               |
| No Prefix = Steels Exc OE                                            | HD = Heavy Duty Frictions                                     |
| A = Value Brand Friction                                             | HP = High Performance Frictions                               |
| A = Valve Body Kits Exc Superior & Transgo                           | HPK = High Performance Clutch Pack Friction Kit, or Steel Kit |
| D = OE Frictions & Steels                                            | T = Tumbled or Refurbished Steels                             |
| J = Dynax Brand Frictions                                            |                                                               |
| R = Raybestos Brand Frictions                                        |                                                               |
| S = Superior Valve Body Kits                                         | T = Teflon Sealing Rings                                      |
| T = Transgo Valve Body Kits                                          | X = Oversized Steels                                          |
| Q = Quality Inspected Pressure Plates                                |                                                               |
| U = Used Pressure Plates                                             |                                                               |
|                                                                      |                                                               |
|                                                                      |                                                               |
| <b>100 Friction, Overdrive, OD Brake, UD Brake (4th, 5th, or 6th</b> | 150 Pressure Plate, Reverse (Top)                             |
| 101 Friction, 5th                                                    | 151 Pressure Plate, Reverse (Bottom)                          |
| 102 Friction, Underdrive, UD Direct, OD Direct                       | 152 Pressure Plate, Coast Clutch (Top)                        |
| 103 Friction, Intermediate (3rd) (also catch all for other clutches) | 153 Pressure Plate, Coast Clutch (Bottom)                     |
| 104 Friction, Intermediate (2nd)                                     | 154 Pressure Plate, Low/ Reverse (Top)                        |
| 105                                                                  | 155 Pressure Plate, Low/ Reverse (Bottom)                     |
| 106 Friction, Direct (High/ Reverse)                                 | 156 Pressure Plate, Overrun Clutch (Top)                      |
| 107                                                                  | 157 Pressure Plate, Overrun Clutch (Bottom)                   |
| 108 Friction, Forward                                                | 158 Pressure Plate, Transfer Clutch (Top)                     |
| 109                                                                  | 159 Pressure Plate, Transfer Clutch (Bottom)                  |
| 110 Friction, Reverse                                                | <b>160 Modulator</b>                                          |
| 111                                                                  | 161                                                           |
| 112 Friction, Coast Clutch (Or 116)                                  | 162 Modulator Hose                                            |
| 113 Friction, Low/Low Hold                                           | 163 Valve, (Under Modulator)                                  |
| 114 Friction, Low/ Reverse                                           | 164 Pin, Modulator                                            |
| 115 Converter Lock Up                                                | <b>165 Valve Body Kit, Regular</b>                            |
| 116 Friction, Overrun Clutch (Coast) (Or 112)                        | 166                                                           |
| 117                                                                  | 167 Valve Body Kit, Jr.                                       |
| 118 Friction, Transfer Clutch                                        | 168                                                           |
| 119 Friction, Module                                                 | 169 Valve Body Kit, Heavy Duty                                |
| <b>120 Steel, Overdrive (OD Brake) (UD Brake) (4th, 5th, or 6th</b>  | 170                                                           |
| 121 Steel, 5th                                                       | 171 Valve Body Kit, Competition                               |
| 122 Steel, Overdrive Direct, Underdrive Direct                       | 172                                                           |
| 123 Steel, Intermediate (3rd)                                        | 173 Valve Body Kit, Competition Stick Shift                   |
| 124 Steel, Intermediate (2nd)                                        | 174 Sonnax Sure Cure Kits                                     |
| 125 Steel, Intermediate (Waved)                                      | <b>175 Sealing Ring Kit</b>                                   |
| 126 Steel, Direct (High/ Reverse)                                    | 176 Sealing Ring, Pump Slide                                  |
| 127 Steel, Direct (High/ Reverse) (Waved)                            | 177 Sealing Ring, Input Shaft                                 |
| 128 Steel, Forward                                                   | 178 Sealing Ring, Turbine Shaft, Stator Shaft Front           |
| 129 Steel, Forward (Waved)                                           | 179 Sealing Ring, Direct Clutch (High/ Reverse) (Stator Rear) |
| 130 Steel, Reverse                                                   | 180 Sealing Ring, Direct (Output Shaft)                       |
| 131 Steel, Reverse (Waved)                                           | 181 Sealing Ring, Forward (Stator)                            |
| 132 Steel, Coast Clutch (Combine w/ 136)                             | 182 Sealing Ring, Sun Gear                                    |
| 133 Steel, Low/Low Hold                                              | 183 Sealing Ring, Intermediate Clutch                         |
| 134 Steel, Low/ Reverse                                              | 184 Sealing Ring, Intermediate Shaft                          |
| 135 Steel, Low/ Reverse (Waved)                                      | 185 Sealing Ring, Overdrive Clutch                            |
| 136 Steel, Overrun Clutch (Coast)                                    | 186 Misc. Rings                                               |
| 137 Friction & Steel Module                                          | 187                                                           |
| 138 Steel, Transfer Clutch                                           | 188                                                           |
| 139 Steel Module                                                     | 189 Sealing Ring, Governor                                    |
| <b>140 Pressure Plate, Overdrive (Top)</b>                           | 190                                                           |
| 141 Pressure Plate, Overdrive (Bottom)                               | 191 Sealing Ring, Intermediate Accumulator (Inner)            |
| 142 Pressure Plate, Overdrive Direct (Underdrive) (Top)              | 192 Sealing Ring, Intermediate Accumulator (Outer)            |
| 143 Pressure Plate, Overdrive Direct (Underdrive) (Bottom)           | 193 Sealing Ring, 2nd Servo Pin                               |
| 144 Pressure Plate, Intermediate (Top)                               | 194 Sealing Ring, 2nd Servo Piston (Inner)                    |
| 145 Pressure Plate, Intermediate (Bottom)                            | 195 Sealing Ring, 2nd Servo Piston (Outer)                    |
| 146 Pressure Plate, Direct (High/ Reverse) (Top)                     | 196 Sealing Ring, 4th Servo Piston (Inner)                    |
| 147 Pressure Plate, Direct (High/ Reverse) (Bottom)                  | 197 Sealing Ring, 4th Servo Piston (Outer)                    |
| 148 Pressure Plate, Forward (Top)                                    | 198 Sealing Ring, Reverse Servo Piston (Inner)                |
| 149 Pressure Plate, Forward (Bottom)                                 | 199 Sealing Ring, Reverse Servo Piston (Outer)                |
|                                                                      |                                                               |
|                                                                      |                                                               |

## Transtar Part # Numbering Guide

|                                                                         |                                                                              |
|-------------------------------------------------------------------------|------------------------------------------------------------------------------|
| 200-                                                                    | -299                                                                         |
| <b>Prefix Letter</b>                                                    | <b>Suffix Letter</b>                                                         |
| No Prefix = New Aftermarket Washers, Bearings                           | K = Washer or Bearing In Kit Form (Bearing w/ 2 Races)                       |
| AR = Reman Races                                                        |                                                                              |
| A = Aftermarket Races                                                   |                                                                              |
| D = OE Washers & Bearings                                               |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
| <b>200 Washer Kit</b>                                                   | 250 Race, Rear Planet (Front Race) (Countershaft Rear) & Caged Brg 1st Drive |
| 201 Bearing Kit                                                         | 251 Washer/Bearing Rear Planet & Caged Brg 1st Driven Sleeve                 |
| 202                                                                     | 252 Race, Rear Planet (Rear Race) & Caged Brg 2nd Driven Gear                |
| 203                                                                     | 253 Race, Rear Ring Gear (Front Race) & Caged Brg 3rd Driven Gear            |
| 204 Washer Kit, (For Planet Pinions)                                    | 254 Washer/Bearing, Rear Ring Gear & Caged Brg 3rd Driven Sleeve             |
| 205 Spacer, Mainshaft Gear                                              | 255 Race, Rear Ring Gear (Rear Race) & Caged Brg 4th Driven Gear             |
| 206 Spacer, Countershaft Gear                                           | 256 Race, Rear B& Caged Brg Drum (Front Race) & Caged Brg 4th Driven Sleeve  |
| 207 Washer, Under Mainshaft Nut (# 795)                                 | 257 Washer/Bearing, Rear B& Caged Brg Drum & Caged Brg 5th Driven Gear       |
| 208 Washer, Under Countershaft Nut (# 796)                              | 258 Race, Rear B& Caged Brg Drum (Rear Race) & Caged Brg 5th Driven Gear     |
| 209 Washer/Bearing, Stator Shaft & Bearing, Converter Hub               | 259 Race, Rear Support (Front Race) & Caged Brg 6th Driven Gear              |
| 210 Race, Pump Stator (Front Race) & Race, Converter Hub                | 260 Washer/Bearing, Rear Support                                             |
| 211 Washer/Bearing, Pump Stator & Bearing, Converter Stator             | 261 Race, Rear Support (Rear Race)                                           |
| 212 Race, Pump Stator (Rear Race)                                       | 262 Race, Case (Front Race)                                                  |
| 213 Race, Overdrive Drum (Front Race)                                   | 263 Washer/Bearing, Case                                                     |
| 214 Washer/Bearing, Overdrive Drum                                      | 264 Race, Case (Rear Race)                                                   |
| 215 Race, Overdrive Drum (Rear Race)                                    | 265 Washer/Bearing, Governor (Top)                                           |
| 216 Race, Overdrive Planet (Front Race)                                 | 266 Washer/Bearing, Governor (Bottom)                                        |
| 217 Washer/Bearing Overdrive Planet                                     | 267 Race, Output Shaft Frt. (Mainshaft Distance Collar)                      |
| 218 Race, Overdrive Planet (Rear Race)                                  | 268 Washer/Bearing, Output Shaft (Front)                                     |
| 219 Race, Overdrive Direct Drum (Front Race)                            | 269 Race, Output Shaft Frt. (Countershaft Distance Collar)                   |
| 220 Washer/Bearing, Overdrive Direct Drum (4th Clu Hub)                 | 270 Race, Output Shaft Rear                                                  |
| 221 Race, Overdrive Direct Drum (Rear Race)                             | 271 Washer/Bearing, Output Shaft (Rear) (Countershaft 4th)                   |
| 222 Race, Overdrive Ring Gear (Front Race)                              | 272 Race, Output Shaft (Rear) (Rear Race)                                    |
| 223 Washer/Bearing, Overdrive Ring Gear                                 | 273 Race, Drive Pinion (Cup) (Differential Side)                             |
| 224 Race, Overdrive Ring Gear (Rear Race)                               | 274 Bearing, Drive Pinion (Cone) (Differential Side)                         |
| 225 Race, Center Support (Front Race)                                   | 275 Bearing, Axle Shaft (Countershaft Center)                                |
| 226 Washer/Bearing, Center Support (Driven Sprocket)                    | 276 Shim, Drive Pinion (Rear)                                                |
| 227 Race, Center Support (Rear Race)                                    | 277 Shim, Drive Pinion (Front)                                               |
| 228 Race, Direct Drum (Front Race)                                      | 278 Race, Drive Sprocket/Transfer Gear                                       |
| 229 Washer/Bearing, Direct Drum                                         | 279 Bearing/Washer, Drive Sprocket/Transfer Gear                             |
| 230 Race, Direct Drum (Rear Race)                                       | 280 Race, Driven Sprocket/Transfer Gear                                      |
| 231 Race, Forward Drum (Front Race)                                     | 281 Bearing/Washer, Driven Sprocket/Transfer Gear                            |
| 232 Washer/Bearing, Forward Drum                                        | 282 Race, Idler Gear (Cup)                                                   |
| 233 Race, Forward Drum (Rear Race)                                      | 283 Bearing, Idler Gear (Cone)                                               |
| 234 Race, Forward Hub (Front Race)                                      | 284 Shim, Idler Gear                                                         |
| 235 Washer/Bearing, Forward Hub, (Mainshaft Center)                     | 285 Washer, Sprag (Front)                                                    |
| 236 Race, Forward Hub (Rear Race)                                       | 286 Washer, Sprag (Rear)                                                     |
| 237 Race, Front Planet (Front Race)                                     | 287 Bearing, Mainshaft (Input Shaft) Front                                   |
| 238 Washer/Bearing, Front Planet                                        | 288 Race, Differential Carrier (Cup) (Ring Gear Side)                        |
| 239 Race, Front Planet (Rear Race)                                      | 289 Bearing, Differential Carrier (Cone) (Ring Gear Side)                    |
| 240 Race, Front Sun Gear (Front Race)                                   | 290 Shim, Differential Carrier (Ring Gear Side)                              |
| 241 Washer/Bearing Front Sun Gear & Converter Turbine to Cover          | 291 Race, Differential Carrier (Cup) (Opposite Ring Gear Side)               |
| 242 Race, Front Sun Gear (Rear Race)                                    | 292 Bearing, Differential Carrier (Opposite Ring Gear Side)                  |
| 243 Race, Shell (Front Race)                                            | 293 Shim, Differential Carrier Brg. (Opposite Ring Gear Side)                |
| 244 Washer/Bearing, Shell & Bearing, Converter Stator to Impeller       | 294 Bearing, Countershaft 1st-Low Gear                                       |
| 245 Race, Shell (Rear Race) & Race, Converter Stator to Impeller        | 295 Bearing, Converter Reactor (Inner)                                       |
| 246 Race, Rear Sun Gear (Front Race) & Converter Stator to End Cap      | 296 Bearing, Viscous Coupling or Awd Differential                            |
| 247 Washer/Brg, Rear Sun Gear & Bearing, Converter Turbine to Stator    | 297 Race, Viscous Coupling or Awd Differential                               |
| 248 Race, Rear Sun Gear (Rear Race) & Race, Converter Turbine to Stator | 298 Bearing, Driven Sprocket Support (Inner)                                 |
| 249                                                                     | 299 Bearing,                                                                 |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |
|                                                                         |                                                                              |

## Transtar Part # Numbering Guide

[illegible]

## Transtar Part # Numbering Guide

|                                                                   |                                                                     |
|-------------------------------------------------------------------|---------------------------------------------------------------------|
| 400-                                                              | -499                                                                |
| <b>Prefix Letter</b>                                              | <b>Suffix Letter</b>                                                |
| No Prefix = Aftermarket Electrical (Exc Raybestos & Domestic NTP) | RK = Component Repair Kit/Rebuild Kit                               |
| No Prefix = ATSG Technical Manuals                                |                                                                     |
| A = Aftermarket Electrical (Raybestos & Domestic NTP)             |                                                                     |
| ATM = ATRA Technical Manuals (see also TMG)                       |                                                                     |
| D = OE Electrical Components                                      |                                                                     |
| M = Misc. Parts (Hoses, Oils, Soaps, Paints, Etc)                 |                                                                     |
| M = Transel Technical Manuals                                     |                                                                     |
| R = Rebuilt Solenoids                                             |                                                                     |
| T = Teckpak Electrical Components                                 |                                                                     |
| TMG = Manuals by GM through ATRA (see also ATM)                   |                                                                     |
|                                                                   |                                                                     |
| <b>400 Technical Manuals (ATSG)</b>                               | <b>450 Detent Cables</b>                                            |
| 401 Dealer Technical Manuals                                      | 451 Detent Cable Repair Kits                                        |
| 402 Specialty Manuals (Transel)                                   | 452 Shift Cables                                                    |
| 403 Specialty Manual Sets (Transel)                               | 453                                                                 |
| 404                                                               | 454                                                                 |
| 405                                                               | 455 Electronic Module EVT                                           |
| 406                                                               | 456 Motor Coil EVT                                                  |
| 407 Technical Video                                               | 457 Armature EVT                                                    |
| 408                                                               | 458 Comutator EVT                                                   |
| 409                                                               | 459 Capacitor EVT                                                   |
| <b>410 Neutral Switch/Manual Lever Switch/Tr Sensor</b>           | <b>M460 Rubber Hoses, Air, Vacuum</b>                               |
| 411 Pressure Switch, 2nd Clutch                                   | M461 Hard Tubing                                                    |
| 412 Pressure Switch, 3rd Clutch                                   | M462 Cooler Line Repair Components                                  |
| 413 Pressure Switch, 4th Clutch                                   | M463 Hitch Pins, Grommets, Ground Straps, Posi Lock Connectors, etc |
| 414 Switch, Spark Control/Neutral Pressure Switch                 | M464 Converter Bolts                                                |
| 415 Switch, Governor (Or Governor Sensor)                         | M465 Lubes & Greases, Oil Supplements & Additives                   |
| 416 Pulse Switch, 4-3                                             | M466 Oil Dry, Oil Dispersants                                       |
| 417 Pulse Generator (Magnetic)                                    | M467                                                                |
| 418 Pulse Width Modulated (PWM)                                   | M468 Oil Temperature Devises                                        |
| 419 Switch, On-Off Pulse Type Speed Sensor (Magnetic Pick-Up)     | M469 Sealers, Silicones, etc.                                       |
| 420 Solenoid Assembly, Shift                                      | M470 Hand Cleaners, Soaps, etc.                                     |
| 421 Solenoid, 1-2 Shift                                           | M471 Markers                                                        |
| 422 Solenoid, 2-3 Shift                                           | M472 Light Bulbs                                                    |
| 423 Solenoid, 3-4 Shift                                           | M473 Paints                                                         |
| 424 Electrical Rebuilding Kit                                     | M474 Converter Nuts                                                 |
| 425 Solenoid, Torque Converter Clutch (TCC)                       | <b>475 Teflon Sleeve (On Turbine Shaft)</b>                         |
| 426 Solenoid, Overrun Clutch                                      | 476 Silencer Ring                                                   |
| 427 Solenoid, Overdrive Clutch                                    | 477 Reluctor, Pulse Generator For Speed Sensor                      |
| 428 Misc. Pressure Control Solenoids (Exc EPC)                    | M478 Locking Compounds - Loctite                                    |
| 429 Sensor, Throttle Position Sensor (TPS)                        | 479                                                                 |
| 430 Misc. Shift Solenoids                                         | 480 Capsule w/ Ball                                                 |
| 431 Solenoid, Electronic Pressure Control (EPC)                   | 481                                                                 |
| 432 Solenoid, Duty (Or Governor Pressure)                         | 482                                                                 |
| 433 Solenoid, Transfer                                            | 483 Cup Plugs                                                       |
| 434 Solenoid, Kickdown                                            | 484 Orifice Plugs                                                   |
| 435                                                               | 485 Dowel Pins or Alignment Pins                                    |
| 436 Sensor, Vehicle Output Speed (VSS)                            | 486                                                                 |
| 437 Sensor, Oil Temperature (TOT or TFT)                          | 487 Grommets, Shift Lever & Vacuum T'S                              |
| 438 Sensor, Turbine (Input) Shaft Speed (TSS)                     | 488                                                                 |
| 439                                                               | 489 Dust Cover                                                      |
| 440 Switch, Kickdown Servo                                        | 490 Vent, Case                                                      |
| 441 Thermostatic Element                                          | 491 Vent, Differential                                              |
| 442 Switch, Manifold Pressure & Vacuum Regulator                  | 492                                                                 |
| 443 Power Train Control Module (PCM)                              | 493 Dip Stick                                                       |
| 444 Case Connector                                                | 494 Filler Tube                                                     |
| 445 Wire Harness, External                                        | 495 Pick-Up Tube (Filter)                                           |
| 446 Wire Harness, Internal                                        | 496 Cooler Line Components (Push-In)                                |
| 447 Electronic Adaptors & Testers                                 | 497                                                                 |
| 448 Misc. Electronic Components                                   | 498                                                                 |
| 449 On-Board Computers                                            | 499                                                                 |
|                                                                   |                                                                     |
|                                                                   |                                                                     |
|                                                                   |                                                                     |

## Transtar Part # Numbering Guide

|                                                     |                                                          |
|-----------------------------------------------------|----------------------------------------------------------|
| 500-                                                | -599                                                     |
| <b>Prefix Letter</b>                                | <b>Suffix Letter</b>                                     |
| AR = Remanufactured Hard Parts                      | Valve Assy. Components                                   |
| A = New Aftermarket                                 | A = Pres. Relief A-1 = Valves 584-1 = Pinion Washers     |
| C = Core                                            | B = Bypass A-2 = Sleeves 584-2 = Pinion Gears            |
| D = OE Hard Parts                                   | C = TCC Valve A-3 = Springs 584-3 = Pinion Pins          |
| MR = Material Recovery                              | D = 1-2 Cap. Mod. A-4 = Retainers 584-4 = Pinion Needles |
| S = Sonnax                                          | E = Accumulator A-5 = Ck Balls 584-5 = Planet Housings   |
| Q = Quality Inspected Hard Parts                    | F = Boost, P.R. A-6 = Plugs 584-6 = Lock Pins (Pinion)   |
| U = Used Hard Parts                                 | G = Servo                                                |
|                                                     | H = Misc                                                 |
|                                                     | L = Spool A-7 = Plungers 584-7 = All As A Set            |
|                                                     | M = Manual                                               |
|                                                     | N = Throttle                                             |
|                                                     | P = Pressure Regulator                                   |
|                                                     | Q = TCC Regulator                                        |
|                                                     | R = Reverse Boost                                        |
|                                                     | S = Shift                                                |
|                                                     | T = TV Boost                                             |
|                                                     | W = PWM Control                                          |
|                                                     | RK = Repair Kit                                          |
|                                                     |                                                          |
| <b>500 Pump, Complete (Front)</b>                   | <b>550 Drum, Overdrive Clutch</b>                        |
| 501                                                 | 551 Drum, Overdrive Direct Clutch                        |
| 502                                                 | 552 Drum, Intermediate Clutch                            |
| 503                                                 | 553                                                      |
| 504                                                 | 554 Drum, Forward Clutch                                 |
| 505                                                 | 555 Drum, Direct Clutch (High/ Reverse 3rd Clutch)       |
| 506                                                 | 556 Drum, Reverse Clutch                                 |
| 507 Pump Components (Valves, Balls, Plugs, Etc.)    | 557 Drum, Low/ Reverse Clutch                            |
| 508 Pump, Auxiliary                                 | 558 Drum, Reaction (2-4 Drum)                            |
| 509 Pump (Rear)                                     | 559 Drum, Coast Clutch                                   |
| <b>510 Pump Body w/ Gears (Front)</b>               | <b>560 Piston Kit, Overdrive Clutch</b>                  |
| 511 Oil Pump Housing (Less Rotor Kit)               | 561 Piston Kit, Overdrive Direct Clutch                  |
| 512                                                 | 562 Piston Kit, Intermediate Clutch                      |
| 513                                                 | 563 Piston Kit, (Low-Hold Manual Low)                    |
| 514                                                 | 564 Piston Kit, Forward Clutch                           |
| 515                                                 | 565 Piston Kit, Direct Clutch (High/ Reverse 3rd Clutch) |
| 516                                                 | 566 Piston Kit, Reverse Clutch                           |
| 517                                                 | 567 Piston Kit, Low/ Reverse Clutch                      |
| 518                                                 | 568 Piston Kit, Reaction (2-4 Clutch)                    |
| 519                                                 | 569 Piston Kit, Coast Clutch                             |
| <b>520 Stator, Front (Pump Cover)</b>               | <b>570 Hub, Overdrive Clutch</b>                         |
| 521                                                 | 571 Hub, Overdrive Direct Clutch                         |
| 522                                                 | 572 Hub, Intermediate Clutch                             |
| 523                                                 | 573 Hub, Low Hold (Low Braking Clutch)                   |
| 524                                                 | 574 Hub, Forward Clutch                                  |
| 525                                                 | 575 Hub, Direct Clutch (High/ Reverse 3rd Clutch)        |
| 526                                                 | 576 Hub, Reverse Clutch                                  |
| 527                                                 | 577 Hub, Low/ Reverse Clutch                             |
| 528                                                 | 578 Hub, Reaction (2-4 Clutch)                           |
| 529 Converter Reactor (Or Stator Tubes)             | 579 Hub, Coast Clutch                                    |
| <b>530 Pump Gear Sets (H = Suffix For Oversize)</b> | <b>580 Planet, Overdrive (-1 For Pinion Washers)</b>     |
| 531 Pump Rotor Sets                                 | 581 Planet Kits, Overdrive Assy                          |
| 532 Pump Rotor (Inner)                              | 582 Planet, Forward                                      |
| 533 Pump Vanes                                      | 583 Planet Kits, Forward Assy                            |
| 534 Pump Slide (Outer)                              | 584 Planet, Rear                                         |
| 535 Pump Pivot Pin (For Pump Slide)                 | 585                                                      |
| 536 Spring, Pump Slide (Outer)                      | 586 Planet, Underdrive                                   |
| 537 Spring, Pump Slide (Inner)                      | 587                                                      |
| 538 Ring, Pump Vane                                 | 588                                                      |
| 539 Guide, Pump Rotor (Plastic)                     | 589                                                      |
| 540 Spring, Pivot Pin (Or By-Pass Valve)            | <b>590 Ring Gear, Overdrive Planet</b>                   |
| 541                                                 | 591                                                      |
| 542                                                 | 592 Ring Gear, Forward Planet                            |
| 543 Flange, Pump Drive                              | 593                                                      |
| 544 Plate, Pump                                     | 594 Ring Gear, Rear Planet                               |
| <b>545 Housing, 4th Clutch</b>                      | 595                                                      |
| 546 Apply Ring, Overdrive Clutch                    | 596 Ring Gear, Underdrive                                |
| 547 Apply Ring, Forward Clutch                      | 597                                                      |
| 548 Apply Ring, Direct Clutch                       | 598 Ring Gear, Differential Planet                       |
| 549 Apply Ring, Low/ Reverse Clutch                 | 599                                                      |

## Transtar Part # Numbering Guide

|                                                 |                                                     |
|-------------------------------------------------|-----------------------------------------------------|
| 600-                                            | -699                                                |
| <b>Prefix Letter</b>                            | <b>Suffix Letter</b>                                |
| AR = Remanufactured Hard Parts                  | K = Hard Parts In Kit Form                          |
| A = New Aftermarket                             | Components                                          |
| C = Core                                        | 681-1 = Bodies                                      |
| D = OE Hard Parts                               | 681-2 = Valves                                      |
| MR = Material Recovery                          | 681-3 = Springs                                     |
| S = Sonnax                                      | 681-4 = Weights                                     |
| Q = Quality Inspected Hard Parts                | 681-5 = C Clips                                     |
| U = Used Hard Parts                             |                                                     |
|                                                 | Sprag # -1 = Rollers                                |
|                                                 | Sprag # -2 = Cages                                  |
|                                                 | Sprag # -3 = Springs                                |
|                                                 |                                                     |
|                                                 |                                                     |
| <b>600 Hub, Overdrive Ring Gear</b>             | <b>650 Sprag, Overdrive</b>                         |
| 601                                             | 651 Sprag, Underdrive                               |
| 602 Hub, Forward Ring Gear                      | 652 Sprag, Intermediate                             |
| 603                                             | 653                                                 |
| 604 Hub, Rear Ring Gear                         | 654 Sprag, Rear (Low)                               |
| 605 Hub, Rear Ring Gear Assembly                | 655                                                 |
| 606                                             | 656 Sprag, 3rd                                      |
| 607                                             | 657                                                 |
| 608                                             | 658 Sprag, Input                                    |
| 609                                             | 659                                                 |
| <b>610 Sun Gear, Overdrive Planet</b>           | <b>660 Sprag Race, Overdrive (Inner)</b>            |
| 611                                             | 661 Sprag Race, Overdrive (Outer)                   |
| 612 Sun Gear, Forward Planet                    | 662 Sprag Race, Intermediate (Inner) (Low/ Reverse) |
| 613                                             | 663 Sprag Race, Intermediate (Outer) (Low/ Reverse) |
| 614 Sun Gear, Rear Planet                       | 664 Sprag Race, Rear (Inner)                        |
| 615                                             | 665 Sprag Race, Rear (Outer)                        |
| 616 Sun Gear, Underdrive                        | 666 Sprag Race, 3rd (Inner)                         |
| 617 Sun Gear, Reduction Gear Planet             | 667 Sprag Race, 3rd (Outer)                         |
| 618 Sun Gear, Final Drive Planet                | 668 Sprag Race, Input (Inner)                       |
| 619 Sun Gear Spacer                             | 669 Sprag Race, Input (Outer)                       |
| <b>620 Drive Shell, Overdrive</b>               | <b>670 Shaft, Input</b>                             |
| 621                                             | 671 Shaft, Pump Drive                               |
| 622 Drive Shell, Input                          | 672 Shaft, Main                                     |
| 623                                             | 673 Shaft, Turbine                                  |
| 624 Drive Shell, Reaction                       | 674 Shaft, Intermediate                             |
| 625                                             | 675 Shaft, Secondary (Or Overdrive)                 |
| 626 Drive Shell, Output                         | 676 Shaft, Counter                                  |
| 627                                             | 677 Shaft, Final Drive                              |
| 628                                             | 678 Shaft, Output                                   |
| 629                                             | 679 Shaft, Idler                                    |
| <b>630 Center Support, Front Housing</b>        | <b>680 Governor, (Mechanical)</b>                   |
| 631 Center Support, Front Assembly Complete     | 681 Governor Components                             |
| 632 Center Support, Center                      | 682 Governor Housing (Governor Bolts To Housing)    |
| 633                                             | 683 Gear, Governor Drive (Drives Governor Gear)     |
| 634 Center Support, Rear                        | 684 Gear, Governor Driven (On Governor)             |
| 635                                             | 685 Support, Governor                               |
| 636 Center Support Hub                          | 686 Cover, Governor                                 |
| 637                                             | 687 Retainer, Governor                              |
| 638                                             | 688                                                 |
| 639 Anti-Clunk Spring (Counter Shaft Lock Keys) | 689 Weight, Governor                                |
| <b>640 Sprag Assembly, Overdrive</b>            | <b>690 Park Gear</b>                                |
| 641                                             | 691 Output Shaft Cover                              |
| 642 Sprag Assembly, Intermediate (Low/ Reverse) | 692 Plate, Overdrive Adaptor                        |
| 643                                             | 693 Bracket, Idler Shaft                            |
| 644 Sprag Assembly, Rear                        | 694 Retainer, Overdrive Sprag Plate                 |
| 645                                             | 695                                                 |
| 646 Sprag Assembly, 3rd                         | 696 Crush Sleeve, (Spacer For Pinion)               |
| 647                                             | 697 Oil Distributor Sleeve                          |
| 648 Sprag Assembly, Input                       | 698 Oil Baffle                                      |
| 649                                             | 699 Oil Slinger                                     |

## Transtar Part # Numbering Guide

|                                                                    |                                                          |
|--------------------------------------------------------------------|----------------------------------------------------------|
| 700-                                                               | -799                                                     |
| <b>Prefix Letter</b>                                               | <b>Suffix Letter</b>                                     |
| AR = Remanufactured Hard Parts                                     | Valve Assy. Components                                   |
| A = New Aftermarket                                                | A = Pres. Relief A-1 = Valves 584-1 = Pinion Washers     |
| C = Core                                                           | B = Bypass A-2 = Sleeves 584-2 = Pinion Gears            |
| D = OE Hard Parts                                                  | C = TCC Valve A-3 = Springs 584-3 = Pinion Pins          |
| MR = Material Recovery                                             | D = 1-2 Cap. Mod. A-4 = Retainers 584-4 = Pinion Needles |
| P = Premium Valve Body                                             | E = Accumulator A-5 = Ck Balls 584-5 = Planet Housings   |
| S = Sonnax                                                         | F = Boost, P.R. A-6 = Plugs 584-6 = Lock Pins (Pinion)   |
| Q = Quality Inspected Hard Parts                                   | G = Servo                                                |
| U = Used Hard Parts                                                | H = Misc                                                 |
|                                                                    | L = Limit / EPC A-7 = Plungers 584-7 = All As A Set      |
|                                                                    | M = Manual                                               |
|                                                                    | N = Throttle                                             |
|                                                                    | P = Pressure Regulator                                   |
|                                                                    | Q = TCC Regulator                                        |
|                                                                    | R = Reverse Boost                                        |
|                                                                    | S = Shift                                                |
|                                                                    | T = TV Boost                                             |
|                                                                    | W = PWM Control                                          |
|                                                                    | RK = Repair Kit                                          |
| <b>700 Chain</b>                                                   | <b>750 Converter Housing (Bell Housing)</b>              |
| 701 Chain Snubber                                                  | 751                                                      |
| 702 Chain Oiler                                                    | 752                                                      |
| 703                                                                | 753 Converter Housing Components                         |
| 704                                                                | 754                                                      |
| <b>705 Sprocket, Drive</b>                                         | <b>755 Case Cover (Front)</b>                            |
| 706 Sprocket, Driven                                               | 756 Case Cover (Top)                                     |
| 707 Gear, Reduction Drive                                          | 757 Case Cover (Side)                                    |
| 708 Gear, Reduction Driven                                         | 758 Differential Case Cover (Aluminum)                   |
| 709                                                                | 759 Case Cover (Rear)                                    |
| <b>710 Gear, Transfer Drive (Main Shaft)</b>                       | <b>760 Case (Main)</b>                                   |
| 711 Support, Transfer Gear (Main Shaft)                            | 761 Case Components                                      |
| 712 Gear, Transfer Driven (Counter Shaft)                          | 762 Case, Overdrive                                      |
| 713 Support, Transfer Gear (Counter Shaft)                         | 763 Case, Differential                                   |
| 714 Gear, Idler Transfer (Secondary Shaft)                         | 764 Spacer, Case To Stator (Aluminum)                    |
| <b>715 Differential Assembly (Housing, Ring, &amp; Side Gears)</b> | <b>765 Pan, Bottom</b>                                   |
| 716 Housing, Differential (W/Side Gears, L/Ring Gear)              | 766 Pan, Side                                            |
| 717 Differential Components                                        | 767 Pan, Top                                             |
| 718 Differential Assembly (Other Than Main) (Awd Type)             | 768                                                      |
| 719 Viscous Coupling                                               | 769 Cover, Filter                                        |
| 720 Ring Gear, Differential (For Sets Use 730K)                    | <b>770 Extension Housing</b>                             |
| 721                                                                | 771 Plate, Extension Housing                             |
| 722                                                                | 772                                                      |
| 723                                                                | 773 Speed-O-Cable                                        |
| 724 Retainer, Differential (Bearing Retainer Front)                | 774 Housing, Speed-O-Gear (Driven)                       |
| 725 Retainer, Differential (Bearing Retainer Rear)                 | <b>775 Bolt, Converter</b>                               |
| 726 Retainer, Differential (Main Cap Type)                         | 776 Bolt, Bell To Case                                   |
| 727 Retainer Clips (Or Bolt & Nut Locks)                           | 777 Bolt, Pump To Case                                   |
| 728                                                                | 778 Bolt, Stator To Pump Body                            |
| 729                                                                | 779 Bolt, Bottom Pan To Case                             |
| <b>730 Pinion (Differential) (For Sets Use 730K)</b>               | 780 Bolt, Case To Case Cover                             |
| 731                                                                | 781 Bolt, Extension Housing To Case                      |
| 732                                                                | 782 Bolt, Valve Body To Case                             |
| 733                                                                | 783 Bolt, Center Support To Case                         |
| 734                                                                | 784 Bolt, 4th Clutch Housing                             |
| 735 Retainer, Pinion                                               | 785 Bolt, Differential Cover To Case                     |
| 736 Pinion Center                                                  | 786 Bolt, Differential Ring Gear To Housing              |
| 737                                                                | 787 Bolt, Pinion Cover                                   |
| 738                                                                | 788 Bolt, Side Pan To Case                               |
| 739                                                                | 789 Bolt, Top Pan To Case                                |
| <b>740 Valve Body Assembly (Main)</b>                              | 790 Bolt, Rear Support To Case                           |
| 741 Valve Body Components                                          | 791 Bolt, Aux. Valve Body To Case                        |
| 742 Secondary Valve Body Assembly                                  | 792 Bolt, Accumulator Cover                              |
| 743                                                                | 793 Bolt, Differential Retainer To Case (Rear)           |
| 744 Aux. Valve Body Assembly                                       | 794 Bolt, Differential Retainer To Case (Front)          |
| 745                                                                | 795 Nut, Main Shaft                                      |
| 746 Spacer Plate, (Other Than Main)                                | 796 Nut, Counter Shaft                                   |
| 747 Spacer Plate, Valve Body (Main)                                | 797 Nut, Secondary Shaft (Or Lever, Detent)              |
| 748 Spacer Plate Components                                        | 798 Nut, Yoke (Or Output Shaft)                          |
| 749 Cam Assembly (Valve Body Linkage)                              | 799 Nut, Idler Shaft (Or Lever, Shift)                   |

## Transtar Part # Numbering Guide

| -800-                                     | -899                                                        |
|-------------------------------------------|-------------------------------------------------------------|
| Prefix Letter                             | Suffix Letter                                               |
| AR = Remanufactured Hard Parts            |                                                             |
| A = New Aftermarket                       |                                                             |
| C = Core                                  |                                                             |
| D = OE Hard Parts                         |                                                             |
| MR = Material Recovery                    |                                                             |
| S = Sonnax                                |                                                             |
| Q = Quality Inspected Hard Parts          |                                                             |
| U = Used Hard Parts                       |                                                             |
|                                           |                                                             |
|                                           |                                                             |
|                                           |                                                             |
|                                           |                                                             |
|                                           |                                                             |
|                                           |                                                             |
| <b>800 Gear, 1st Mainshaft (Low)</b>      | <b>850 Cushion Spring, Overdrive Clutch</b>                 |
| 801 Gear, 1st Countershaft (Low)          | 851 Cushion Spring, Overdrive Direct Clutch                 |
| 802 Gear, 1st Secondary Shaft (Low)       | 852 Cushion Spring, Intermediate Clutch                     |
| 803 Gear, 2nd Mainshaft                   | 853 Cushion Spring, Forward Clutch                          |
| 804 Gear, 2nd Countershaft                | 854 Cushion Spring, Reverse Clutch                          |
| 805 Gear, 2nd Secondary Shaft             | 855 Cushion Spring, Reaction Clutch                         |
| 806 Gear, 3rd Mainshaft                   | 856 Cushion Spring, Coast Clutch                            |
| 807 Gear, 3rd Countershaft                | 857 Cushion Spring, Low/ Reverse Clutch                     |
| 808 Gear, 3rd Secondary Shaft             | 858 Cushion Spring, Direct Clutch                           |
| 809 Gear, 4th Mainshaft                   | 859                                                         |
| 810 Gear, 4th Countershaft                | <b>860 Snap Ring, Overdrive Clutch (Bottom)</b>             |
| 811 Gear, 4th Secondary Shaft             | 861 Snap Ring, Overdrive Clutch (Top)                       |
| 812 Gear, 5th Mainshaft                   | 862 Snap Ring, Overdrive Spring & Retainer                  |
| 813 Gear, 5th Counter Shaft               | 863 Snap Ring, Overdrive Direct Clutch (Bottom)             |
| 814 Gear, 5th Secondary Shaft             | 864 Snap Ring, Overdrive Direct Clutch (Top)                |
| 815 Gear, Reverse Mainshaft               | 865 Snap Ring, Overdrive Direct Spring & Retainer           |
| 816 Gear, Reverse Countershaft            | 866 Snap Ring, Overdrive Sun Gear                           |
| 817 Gear, Reverse Secondary Shaft         | 867 Snap Ring, Overdrive Planet                             |
| 818 Gear, Reverse Idler                   | 868 Snap Ring, Overdrive Ring Gear (Or Pinion Pin Retainer) |
| 819 Shaft, Reverse Idler                  | 869 Snap Ring, Coast Clutch (Bottom)                        |
| 820 Cover, Reverse Idler                  | 870 Snap Ring, Coast Clutch (Top)                           |
| 821 Gear, Mainshaft Idler                 | 871 Snap Ring, Coast Clutch Spring & Retainer               |
| 822 Gear, Countershaft Idler              | 872 Snap Ring, Intermediate Clutch (Bottom)                 |
| 823 Gear, Secondary Shaft Idler           | 873 Snap Ring, Intermediate Clutch (Top)                    |
| 824                                       | 874 Snap Ring, Intermediate Spring & Retainer               |
| 825 Gear, PTO                             | 875 Snap Ring, Forward Clutch (Bottom)                      |
| 826                                       | 876 Snap Ring, Forward Clutch (Top)                         |
| 827                                       | 877 Snap Ring, Forward Spring & Retainer                    |
| 828                                       | 878 Snap Ring, Direct Clutch (Top)                          |
| 829                                       | 879 Snap Ring, Direct Spring & Retainer                     |
| <b>830 Selector</b>                       | 880 Snap Ring, Input Shaft                                  |
| 831 Lever, Range Selector                 | 881 Snap Ring, Forward Hub                                  |
| 832                                       | 882 Snap Ring, Front Planet Ring Gear                       |
| 833                                       | 883 Snap Ring, Center Support                               |
| 834                                       | 884 Snap Ring, Front Sun Gear                               |
| 835 Hub, Selector                         | 885 Snap Ring, Low/ Reverse Clutch                          |
| 836                                       | 886 Snap Ring, Shell                                        |
| 837                                       | 887 Snap Ring, Split (Horse Shoe Clip)                      |
| 838 Axle Flange                           | 888 Snap Ring, Rear Sun Gear                                |
| 839 Magnet                                | 889 Snap Ring, Rear Planet Ring Gear                        |
| 840 Shift Fork                            | 890 Snap Ring, Rear Drum                                    |
| 841 Yoke (Output Shaft)                   | 891 Snap Ring, Reverse Clutch (Bottom)                      |
| 842 Bracket, Driven Speed-O Housing Clip  | 892 Snap Ring, Reverse Clutch (Top)                         |
| 843 Bracket, Modulator/Solenoid           | 893 Snap Ring, Reverse Spring & Retainer                    |
| 844 Key (For Key-Way)                     | 894 Snap Ring, Output Shaft (Front)                         |
| 845 Plate, Pick-Up (Speed Sensor)         | 895 Snap Ring, Output Shaft (Rear)                          |
| 846 Misc. Brackets, Mounts, Diff., Struts | 896 Snap Ring, Servo Cover                                  |
| 847 Gear, Speed-O Drive                   | 897 Snap Ring, Extension Housing (Or Pinion)                |
| 848 Gear, Speed-O Driven                  | 898 Snap Ring, Drive Sprocket                               |
| 849 Clip, Drive Speed-O-Gear              | 899 Snap Ring, Driven Sprocket                              |

## Transtar Part # Numbering Guide

|                                            |                                                                   |
|--------------------------------------------|-------------------------------------------------------------------|
| 900-                                       | -999                                                              |
| <b>Prefix Letter</b>                       | <b>Suffix Letter</b>                                              |
| AR = Remanufactured Hard Parts             | Components                                                        |
| A = New Aftermarket                        | 915-1 = Lever                      991-1 = Lever                  |
| C = Core                                   | 915-2 = Apply Strut              991-2 = Spring & Roller (Detent) |
| D = OE Hard Parts                          | 915-3 = Anchor Strut            991-3 = Rooster Comb              |
| MR = Material Recovery                     | 915-4 = Lever Pin                991-4 = Shaft (Manual)           |
| S = Sonnax                                 | 915-5 = Retainer or Clip        991-5 =                           |
| Q = Quality Inspected Hard Parts           | 991-6 = Bracket (Parking Lock)                                    |
| U = Used Hard Parts                        | 991-7 = Wire Link                                                 |
|                                            |                                                                   |
|                                            | 995-1 = Park Pawl                                                 |
|                                            | 995-2 = Park Pin                                                  |
|                                            | 995-3 = Park Spring                                               |
|                                            |                                                                   |
| <b>900 Servo Assembly, Overdrive</b>       | 950 Accumulator Assembly, Underdrive                              |
| 901 Servo Spring, Overdrive                | 951 Accumulator Spring, Underdrive                                |
| 902 Servo Piston, Overdrive                | 952 Accumulator Piston, Underdrive                                |
| 903 Servo Pin, Overdrive                   | 953 Accumulator Pin, Underdrive                                   |
| 904 Servo Cover, Overdrive                 | 954 Accumulator Cover, Underdrive                                 |
| 905 Servo Assembly, Intermediate           | 955 Housing, Forward Piston                                       |
| 906 Servo Spring, Intermediate             | 956 Housing, Intermediate Piston                                  |
| 907 Servo Piston, Intermediate             | 957 Housing, Reverse Piston                                       |
| 908 Servo Pin, Intermediate                | 958 Tube, Brake Apply (Tin Shield)                                |
| 909 Servo Cover, Intermediate              | 959                                                               |
| 910 Servo Assembly, Reverse                | <b>960 Piston, Overdrive Clutch</b>                               |
| 911 Servo Spring, Reverse                  | 961 Piston, Overdrive Direct Clutch (4th Clutch)                  |
| 912 Servo Piston, Reverse                  | 962 Piston, Intermediate Clutch (2nd)                             |
| 913 Servo Pin, Reverse                     | 963 Piston, Intermediate Clutch (3rd)                             |
| 914 Servo Cover, Reverse                   | 964 Piston, Forward Clutch (Also could be Underdrive)             |
| <b>915 Band Strut Assembly, Overdrive</b>  | 965 Piston, Direct Clutch                                         |
| 916 Band Strut Assembly, Intermediate      | 966 Piston, Reverse Clutch                                        |
| 917 Band Strut Assembly, Reverse           | 967 Piston, Low/ Reverse/Manual Low                               |
| 918 Band Adjusting Screw, Overdrive        | 968 Piston, Reaction Clutch                                       |
| 919 Band Adjusting Screw, Intermediate     | 969 Piston, Coast Clutch (Overrun)                                |
| 920 Band Adjusting Screw, Reverse          | <b>970 Return Spring, Overdrive Direct Clutch</b>                 |
| 921 Band Guide                             | 971 Return Spring, Overdrive Clutch                               |
| 922 Band Nut, Intermediate                 | 972 Return Spring, Intermediate Clutch                            |
| 923 Band Nut, Reverse                      | 973 Return Spring, Intermediate Clutch (3rd)                      |
| <b>924 Regulator Assembly</b>              | 974 Return Spring, Forward Clutch                                 |
| 925 Accumulator Assembly, 1-2              | 975 Return Spring, Direct Clutch                                  |
| 926 Accumulator Spring, 1-2                | 976 Return Spring, Reverse Clutch                                 |
| 927 Accumulator Piston, 1-2                | 977 Return Spring, Low/ Reverse/Manual Low                        |
| 928 Accumulator Pin, 1-2                   | 978 Return Spring, Reaction Clutch                                |
| 929 Accumulator Cover, 1-2                 | 979 Return Spring, Coast Clutch                                   |
| 930 Accumulator Assembly, 2-3              | <b>980 Retainer, Overdrive Direct Clutch Spring</b>               |
| 931 Accumulator Spring, 2-3                | 981 Retainer, Overdrive Clutch Spring                             |
| 932 Accumulator Piston, 2-3                | 982 Retainer, Intermediate Clutch Spring                          |
| 933 Accumulator Pin, 2-3                   | 983 Retainer, (Low-Hold Manual Low)                               |
| 934 Accumulator Cover, 2-3                 | 984 Retainer, Forward Clutch Spring                               |
| 935 Accumulator Assembly, 3-4              | 985 Retainer, Direct Clutch Spring                                |
| 936 Accumulator Spring, 3-4                | 986 Retainer, Reverse Clutch Spring                               |
| 937 Accumulator Piston, 3-4                | 987 Retainer, Low/ Reverse Clutch Spring                          |
| 938 Accumulator Pin, 3-4                   | 988 Retainer, Reaction Clutch Spring                              |
| 939 Accumulator Cover, 3-4                 | 989 Retainer, Coast Clutch Spring                                 |
| 940 Accumulator Assembly, Converter Clutch | <b>990</b>                                                        |
| 941 Accumulator Spring, Converter Clutch   | 991 Linkage Assembly, Internal                                    |
| 942 Accumulator Piston, Converter Clutch   | 992 Linkage Assembly, External                                    |
| 943 Accumulator Pin, Converter Clutch      | 993 Rooster Comb, Manual Valve Selector Lever                     |
| 944 Accumulator Cover, Converter Clutch    | 994 Park Rod Actuator                                             |
| 945 Accumulator Assembly, Low/ Reverse     | 995 Park Pawl Assembly                                            |
| 946 Accumulator Spring, Low/ Reverse       | 996 Cooler Line Fittings, (Or Test Fittings In Case)              |
| 947 Accumulator Piston, Low/ Reverse       | 997 TV Linkage Bracket                                            |
| 948 Accumulator Pin, Low/ Reverse          | 998 Oil Cooler, External                                          |
| 949 Accumulator Cover, Low/ Reverse        | 999 Oil Tube Sets                                                 |
|                                            |                                                                   |
|                                            |                                                                   |